



Vault™ Standard HYPO Specifications

The MIOX Vault™ on-site generator is designed for high efficiency, low lifecycle cost, durability and reliability. The Vault standard hypo configuration features self-adjusting flow control and an easy-to-upgrade cell to convert between sodium hypochlorite and advanced mixed oxidant. Expandable capacity offers ultimate flexibility. With over 40% improved salt and energy efficiencies, the Vault is built for cost-effective operation. Using just salt and power to generate a dilute chlorine-based solution eliminates the storage and handling of hazardous disinfection chemicals while providing chlorine residual.

	H Vault 25	H Vault 50	H Vault 75	H Vault 100
Rated FAC Capacity	25 lbs/day 11.3 kg/day	50 lbs/day 22.7 kg/day	75 lbs/day 34 kg/day	100 lbs/day 45.4 kg/day
Salt Conversion (SCE)*	3.0 lb salt/lb FAC 3.0 kg salt/kg FAC			
Energy Conversion (ECE)*	2.0 kW-hr/lb FAC 4.4 kW-hr/kg FAC			
FAC Concentration*	8,000 mg/L (+/- 1,000)			
Flow Rate^	21 gph 79.5 lph	42 gph 159 lph	63 gph 238.5 lph	84 gph 318 lph
Nominal Energy to Unit	13 A 3 KVA	26 A 6 KVA	39 A 9 KVA	52 A 12 KVA
Electrical Service Requirement (OSG Only)	200-240 VAC, 1 ph, 30A, 50/60 hertz	200-240 VAC, 1 ph, 60A, 50/60 hertz	200-240 VAC, 1 ph, 90A, 50/60 hertz	200-240 VAC, 1 ph, 120A, 50/60 hertz
Air Temp. Required	45° to 110° F 7° to 43° C			
Recommended Feed Water Temperature*	55° to 80° F 12° to 27° C			
Allowable Feed Water Temperature*	40° to 95° F 5° to 35° C			
Feed Water Pressure	25 to 100 psi 172 to 689 kPa			
Water Hardness	0 – 17 mg/L (1 grain/gallon)			
Maximum Silica Limit	20 mg/L			
Energy Add for Internal Vent	0.7 kW	1.4 kW	2.1 kW	2.8 kW
Approximate Dimensions (WxDxH)	36 x 17.4 x 65.5 inches 91.44 x 44.2 x 166.37 cm			
Self Cleaning	NO			


*Performance may vary depending on salt quality, water quality, and water temperature.

^ Feed water flow rate is subject to +/- 15% variation

Note: This electronic document is controlled. Once this document is printed it becomes uncontrolled and obsolete. Refer only to electronic document for the latest information.



Vault Drawing

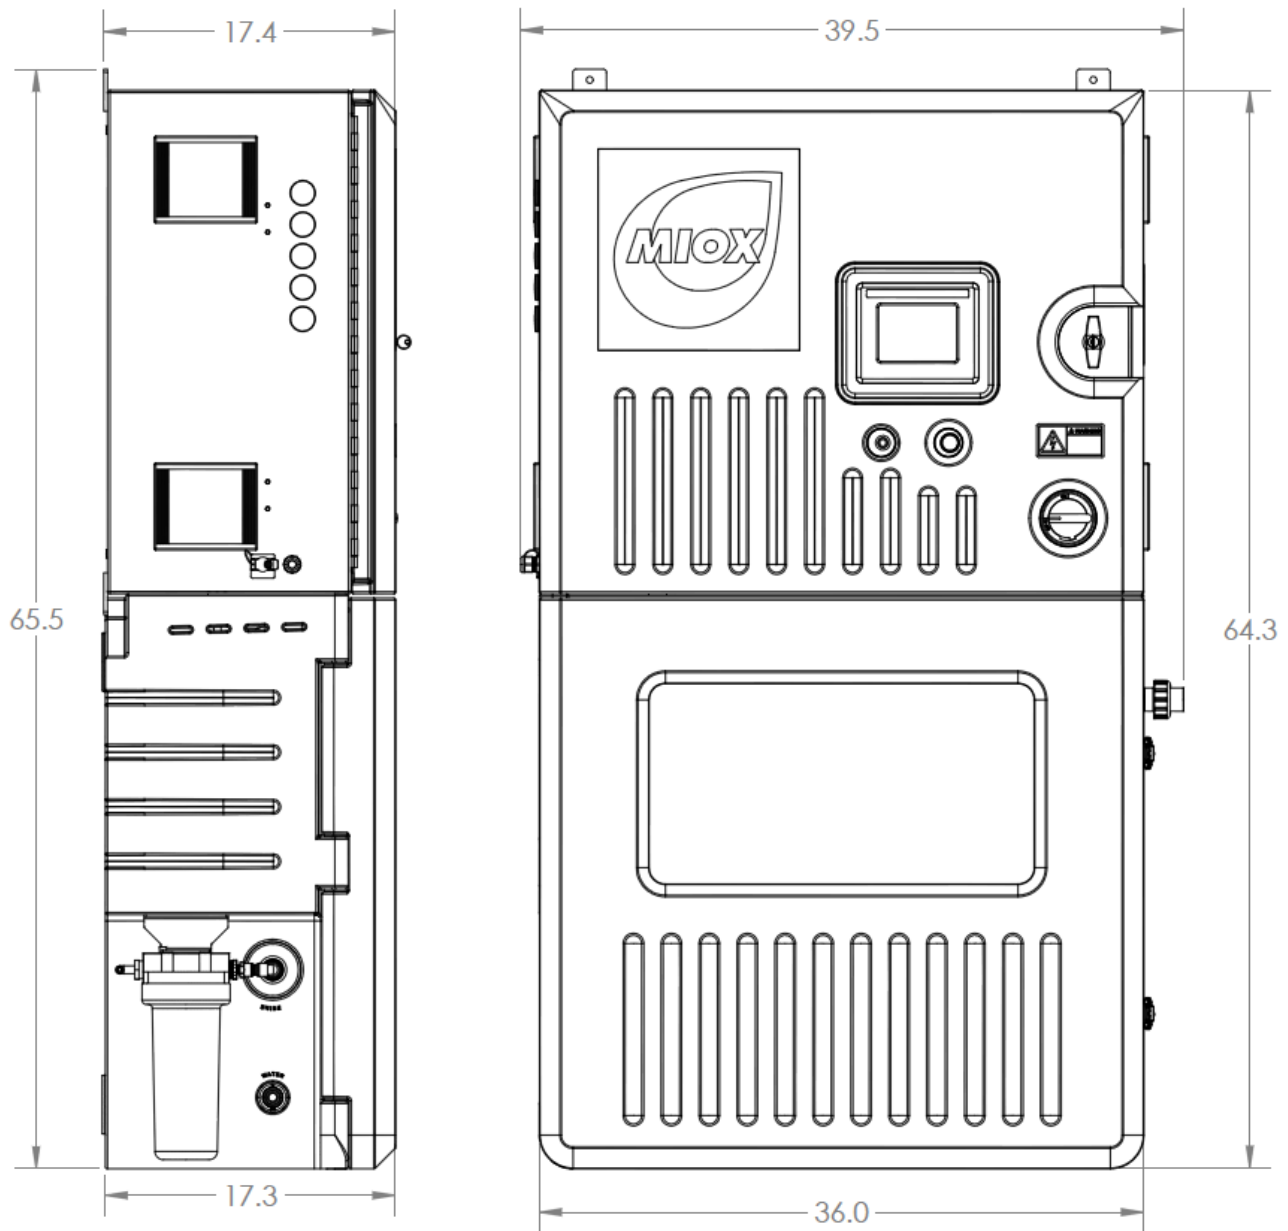

REFERENCE GENERAL ARRANGEMENT DRAWING 112-00001
FOR INSTALLATION REQUIREMENTS

Note: This electronic document is controlled. Once this document is printed it becomes uncontrolled and obsolete. Refer only to electronic document for the latest information.

